


# — PLEASE FOLLOW THIS PROCEDURE —

**This will assure your backflow preventer does not freeze, incurring costly repair.**

1. Turn off the main shut-off valve in basement (A) which provides water to the system.
2. Open all inlet and outlet drain valves on the system (B and E).
3. Open inlet and outlet shut-off valves on backflow prevention assembly (C and D) and all testcocks. Leave in half open / half closed (45° angle) position to allow for full drainage of ball valve shut-offs.
4. Open the two (2) testcocks on the side of the backflow preventer (F). Note: New style is screw head type.

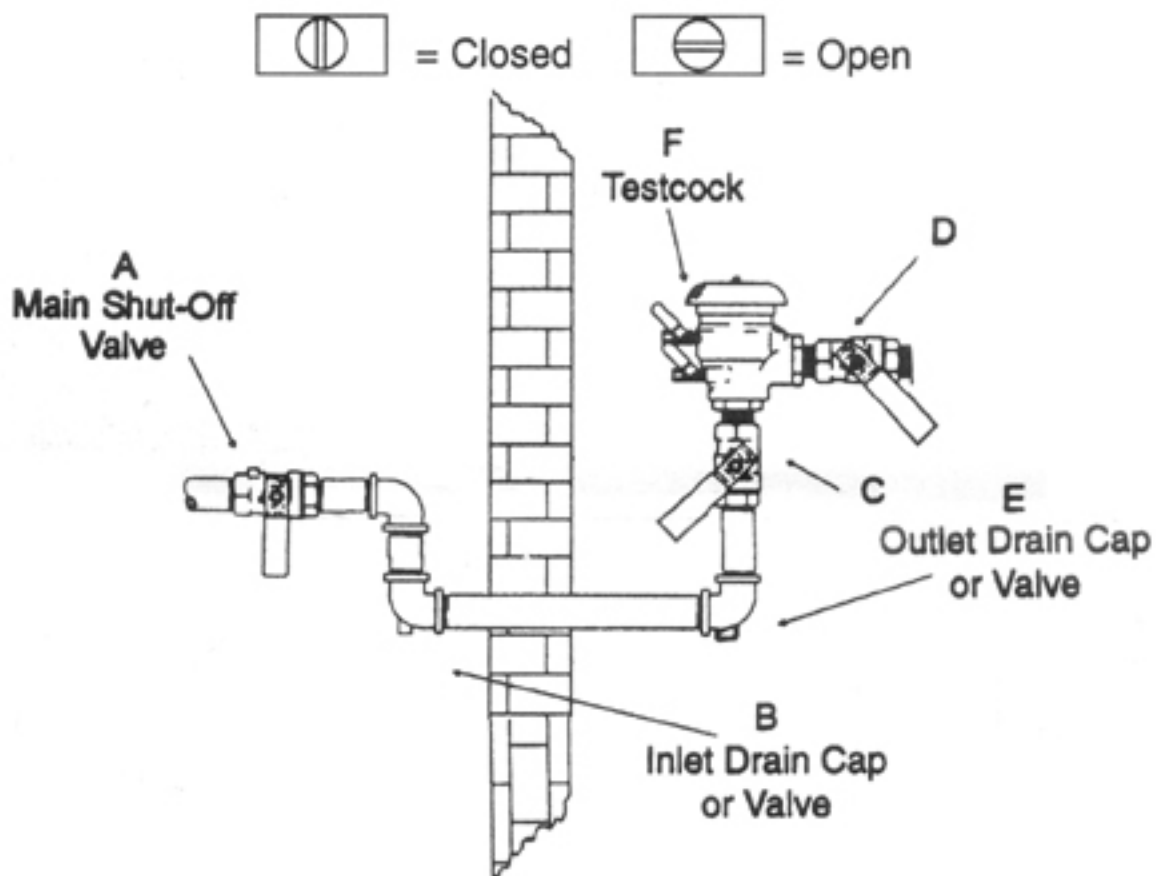

**YOUR SPRINKLER SYSTEM MUST STILL BE WINTERIZED.**

**PLEASE CONTACT US TO MAKE AN APPOINTMENT!**