


MADDOX IRRIGATION, INC.

SPRING START-UP INSTRUCTIONS

- Step 1 Go outside and locate your vacuum breaker
- Step 2 Turn handle to valves so that they are going even with the pipe (bottom valve is to be vertical and left valve is to be horizontal)
- Step 3 Turn test cocks in vertical position
- Step 4 Tighten or close drain (if applicable)
- Step 5 Go in basement and close or tighten drain (if applicable)
- Step 6 Turn on water slowly and check for leaks
- Step 7 Turn on controller and check to make sure all zones and heads are working properly

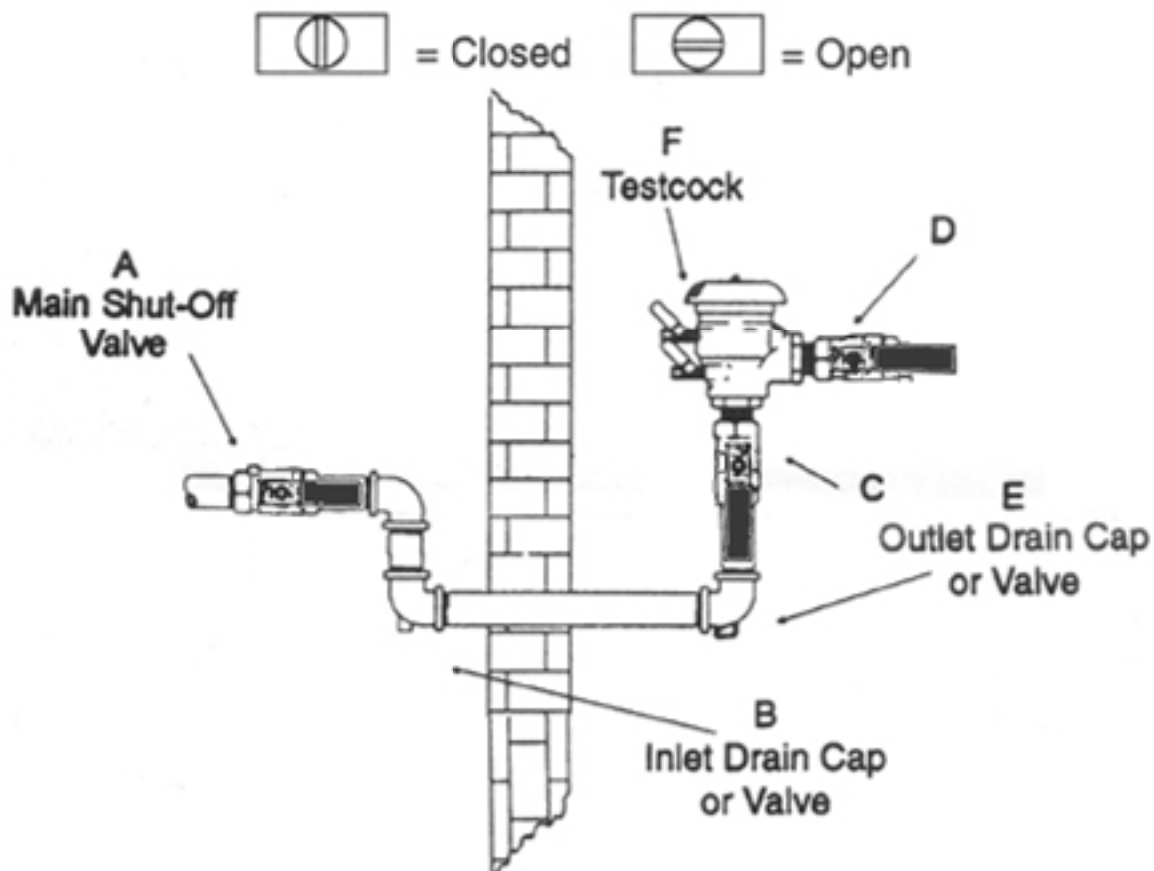

**THIS IS HOW YOUR VACUUM BREAKER SHOULD LOOK
ONCE THESE STEPS ARE COMPLETED**